



Installation of Oetiker Sealing Solutions for PEX Systems


1. Slip clamp over tubing.

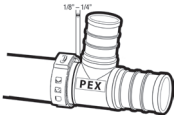

2. Close clamp ear with tool, tool will not release until clamp is fully closed.



3. Visually inspect clamp for correct closed ear form.

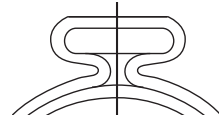

The recommended distance (dimension) between the "Clamp" and "End of the Tube" is 1/8" – 1/4".

IMPORTANT For proper installation of standard PEX and PEXGrip® clamps, ear closure is required.

* For proper installation of clamps, please use an Oetiker recommended installation tool.

Installation Tools

2-Handle Ratchet Pincers



Item no. 14100069

- + Tool can be calibrated
- + Heavy-duty commercial grade
- + Tool will not release until clamp is properly closed
- + Lightweight for easy handling
- + Heavy-duty sealing action for stainless steel Ear Clamps

Cordless Clamp Pincers



Oetiker CP 01/02

- + Efficient, uniform and repeatable assembly
- + Cordless installation tool for Ear Clamps
- + Lightweight, ergonomic design for easy handling
- + LED-display to indicate battery capacity and service interval

3-Handle Ratchet Pincers



Item no. 14100280

- + Single handed installation
- + Tool can be calibrated
- + Heavy-duty commercial grade
- + Tool will not release until clamp is properly closed
- + Lightweight for easy handling
- + Heavy-duty sealing action for stainless steel Ear Clamps

Pneumatic Pincers



Oetiker HO ME 3000/5000/7000

- + Installation tool with high process reliability
- + Efficient, uniform assembly
- + High-quality, complete pincer system for uniform clamp closures
- + Full range of pincer heads, for compatibility to all standard clamps
- + Adaption of special head designs possible

Hand Clamp Cutter

Item no. 14100425



- + Quick and easy PEX Clamp removal
- + Safest method for clamp removal
- + Requires minimal hand force

Please ask your local supplier for the Oetiker PEXGrip® or contact Oetiker direct for further assistance.



USA
Oetiker, Inc.
6317 Euclid Street
Marlette, Michigan 48453-0217
T +1 800 959 0398
F +1 989 635 2157
inquiries@oetiker.com

Canada
Oetiker Limited
203 Dufferin Street South
P. O. Box 5500
Alliston, Ontario L9R 1W7
T +1 800 959 0398
inquiries@oetiker.com